

[illegible]

ADD JUMPER FROM TERMINAL BLOCK "18" TO TERMINAL BLOCK "5" WHEN USING DPI (-HC3 or -20*) JUMPER IS INCLUDED IN RAIL IN TERMINAL BLOCK 18.

SMC FACTORY PRE-PROGRAMMED PARAMETER
A2=START, A3=COAST, A4=OPTION STOP
Product specific (not test setup ones):

- PAR# 56 Disable 0
- PAR# 57 Disable 0
- PAR# 172 Aux1 Config to Ext Bypass 4
- PAR# 176 Aux2 Config to Fault Normal (0)
- PAR# 177 Enabled 1
- PAR# 230 (Upper) XXXX XXXX 0000 0010
- PAR# 230 (Lower) 0000 0000 0000 0001

RELAY FUNCTIONS;
R1: PREVENT RACE CONDITION BETWEEN A3 &
A2
BR 11-14: HOLD-IN CONTACT WITH START-STOP
FOR BYPASS
SR 11-14: HOLD-IN CONTACT WITH START-STOP
FOR SR RELAY
(STARTS SMC)
SR 31-34: STARTS SMC WITH PILOT DEVICE (NO
DPI PRESENT)
R1 11-14: SMC START COMMAND

ADDITIONAL CONTROL CIRCUIT OVERCURRENT PROTECTION REQUIRED FOR NON-COMBINATION STARTERS. REFER TO NATIONAL ELECTRIC CODE.

	Rockwell Automation			CONFIDENTIAL AND PROPRIETARY INFORMATION: THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION OF ROCKWELL AUTOMATION INC., AND MAY NOT BE USED, COPIED OR DISCLOSED TO OTHERS, EXCEPT WITH THE AUTHORIZED WRITTEN PERMISSION OF ROCKWELL AUTOMATION, INC.	
	Title: SMC COMBO			S.O.	
CATALOG NO.					
152S-D18JCD-J40-3-3B-BP					
Drawn by: AUTO_GEN		Date: 01/18/18		Sheet: 1 of 2	
				Ver: 00	
				Size: D	