



- 1) With 193-EC2 / -EC3 only
- 2) Thermistor input (PTC), with 193-EC2 / -EC3 only
- 3) External ground fault sensor, with 193-EC3 only

F1 = 140F-D3; Q11 = 100-C
 F2 = 193-EC1/EC2/EC3

Standard Busbar Module

MCS Direct Online Starter MCS Starter für Direktanlauf MCS Démarreur direct MCS Avviatore diretto MCS Arrancador directo	MASSTAB EHELLE SCALE	GEZ. Dat. 06.11.12	GEPR.	GES.
	Name Hug			
	Nr. OA	Dat.06.11.12 Vis. Hug	Nr. 01	Dat.28.08.13 Vis. Hug