



- 1) N.O. auxiliary contact alternatively
- 2) N.O. trip contact instead of an auxiliary contact
- 3) Optional safety contact instead of wire connection
- 4) With 193-EC2 / -EC3 only
- 5) Thermistor input (PTC), with 193-EC2 / -EC3 only
- 6) External ground fault sensor, with 193-EC3 only

Q1 = 140M-C/D/F; Q11 = 100-C
 F1 = 193-EC1/EC2/EC3

Iso™ Busbar Module

MCS Direct Online Starter MCS Starter für Direktanlauf MCS Démarreur direct MCS Avviatore diretto MCS Arrancador directo	MASSTAB EHELLE SCALE	GEZ. Dat. 9.04.02	GEPR. Y	GES.
	Name Walti	N	Wa	
	Nr. OC	Dat.30.08.02 Vis. Wa	Nr. 02	Dat.26.11.08 Vis. Hug
			Dat.28.08.13 Vis. Hug	