



- 1) N.O. auxiliary contact alternatively
- 2) N.O. trip contact instead of an auxiliary contact
- 3) Optional safety contact instead of wire connection
- 4) Thermistor input (PTC)
- 5) External ground fault sensor, with 193-EC3 only

Q1 = 140M-C/D/F; Q11, Q12 = 100-C;  
 F1 = 193-EC2 / -EC3

ISO™ Busbar Modules

MCS Reversing Starter MCS Wendestarter MCS Démarreur-inverseur MCS Teleinvertore MCS Inversore	MASSTAB ECHELLE SCALE	GEZ. Dat. 8.04.02	GEPR. Y	GES.
	Name Walti	N	Wa	
	Nr. OB	Dat.23.05.02 Vis. Wa	Nr. 02	Dat. 26.11.08 Vis. Hug
			Dat. 28.08.13 Vis. Hug	