


1492-XIMF-F120-2

*Fusible 8-Channel Expander with 120V AC Blown Fuse
Indicators*

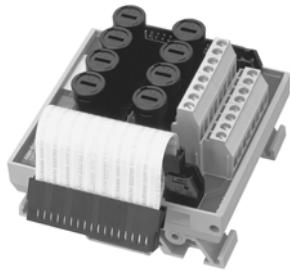

Application Notes

- 1. Compatibility** — To ensure proper operation with the I/O module, do **not** exceed the voltage and current ratings of the XIM.
- 2. Wiring** — Refer to the Label Section on page 174. For Field-Side Wiring Diagrams, refer to the Wiring System web site information on page 200.
- 3. Extra Terminals** — Eight field-side terminals are jumpered together on the XIM. For some I/O modules, the terminals are also internally connected to module common through the pre-wired cable. Refer to the XIM and CABLE pinouts.
- 4. Dimensions** — Refer to page 166.
- 5. LEDs** provide blown fuse indication.

Pinout

Refer to page 130.

1492-XIMF-F120-2, Continued

Pinout, Continued

