

LEVEL I/O CAT. NO.

16 / 32 RELAY MODULE LABEL

LEVEL	I/O CAT. NO.	16 / 32 RELAY MODULE LABEL																			
UPPER	1746- OB 16, OB 16E OB P1 6	+V	+V	OUT 8 COM NO		OUT 9 COM NO		OUT 10 COM NO		OUT 11 COM NO		OUT 12 COM NO		OUT 13 COM NO		OUT 14 COM NO		OUT 15 COM NO			
LOWER	1769- OB16	COM	COM	OUT 0 COM NO		OUT 1 COM NO		OUT 2 COM NO		OUT 3 COM NO		OUT 4 COM NO		OUT 5 COM NO		OUT 6 COM NO		OUT 7 COM NO			
UPPER	1756- OB16E	+V	+V	OUT 8 COM NO		OUT 9 COM NO		OUT 10 COM NO		OUT 11 COM NO		OUT 12 COM NO		OUT 13 COM NO		OUT 14 COM NO		OUT 15 COM NO		COM	COM
LOWER	1794- OB16, 1794-OB16P	+V	+V	OUT 0 COM NO		OUT 1 COM NO		OUT 2 COM NO		OUT 3 COM NO		OUT 4 COM NO		OUT 5 COM NO		OUT 6 COM NO		OUT 7 COM NO		COM	COM
UPPER	1771- OBD	+V	+V	OUT 8 COM NO		OUT 9 COM NO		OUT 10 COM NO		OUT 11 COM NO		OUT 12 COM NO		OUT 13 COM NO		OUT 14 COM NO		OUT 15 COM NO		COM	COM
LOWER		+V	+V	OUT 0 COM NO		OUT 1 COM NO		OUT 2 COM NO		OUT 3 COM NO		OUT 4 COM NO		OUT 5 COM NO		OUT 6 COM NO		OUT 7 COM NO		+V	+V
UPPER LEFT	1746- OB32, OB32E	+V	+V	OUT 8 COM NO		OUT 9 COM NO		OUT 10 COM NO		OUT 11 COM NO		OUT 12 COM NO		OUT 13 COM NO		OUT 14 COM NO		OUT 15 COM NO			
LOWER LEFT	1756- OB32, OV32E 1769- OB32T, OB32	+V	+V	OUT 0 COM NO		OUT 1 COM NO		OUT 2 COM NO		OUT 3 COM NO		OUT 4 COM NO		OUT 5 COM NO		OUT 6 COM NO		OUT 7 COM NO			
UPPER RIGHT	1794- OB32P 1771- OBN			OUT 24 COM NO		OUT 25 COM NO		OUT 26 COM NO		OUT 27 COM NO		OUT 28 COM NO		OUT 29 COM NO		OUT 30 COM NO		OUT 31 COM NO		COM	COM
LOWER RIGHT				OUT 16 COM NO		OUT 17 COM NO		OUT 18 COM NO		OUT 19 COM NO		OUT 20 COM NO		OUT 21 COM NO		OUT 22 COM NO		OUT 23 COM NO		COM	COM
	NUMERIC	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
		21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
		1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
		2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40

SEE NOTE 3.

