

SPEED SWITCHES

★DESCRIPTION — Bulletin 808 Speed Switches are furnished in two enclosure types; NEMA Type 1, 4 and 13 or NEMA Type 7 & 9. They are supplied in either of two contact arrangements; two normally open (2 N.O.) or two normally closed (2 N.C.). Two speed ranges are available: 20-80 and 50-1000 RPM. Modifications include a lockout solenoid and three types of mounting brackets, either factory installed or in kit form for user installation.

CONTACT RATINGS -


AC NEMA RATING DESIGNATION B600							DC		
Max.	Amperes		Continuous	Voltamperes		Max.			
AC Voltage	Make	Break	Carrying Current	Make	Break	Voltage	Amperes		
120 240 480 600	30 15 7.5 6	3.00 1.50 0.75 0.60	5 5 5 5	3600 3600 3600 3600	360 360 360 360	115-125 230-250	0.12 0.08		


CAUTION - To avoid electrical shock and/or unintended operation of equipment, disconnect all power to the speed switch and controlled equipment before any maintenance or repair of the speed switch.

MAINTENANCE - Periodic inspection of the shaft seal is suggested. If seal wear is evident, replace with External Bearing Seal Kit Catalog Number 808-N5. Installation instructions are included with replacement kit.

CAUTION - Do not attempt to disassemble the shaft assembly. Any such attempt may permanently damage the Speed Switch.

Bearings are the permanently lubricated type. In severe environments, such as cement dust, the shaft seal should be cleaned and lubricated with "Andersol 757" or equivalent. "Andersol 757" is a synthetic diester multi-purpose grease.

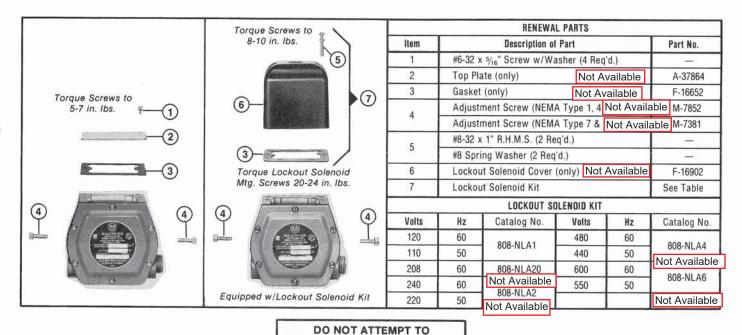


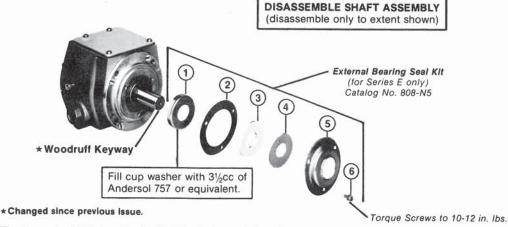

Also used on NEMA Type 4 series identification letters, A, B, or C.

EXTERNAL BEARING SEAL KIT Item Description of Part Cup Washer 2 Gasket 3 Felt Washer 4 Polyurethane Washer 5 **Dust Cover** (3) #6-32 x .312" Fillister Head 6 Screws w/Washers

Publication 808-6.0 - June, 1980

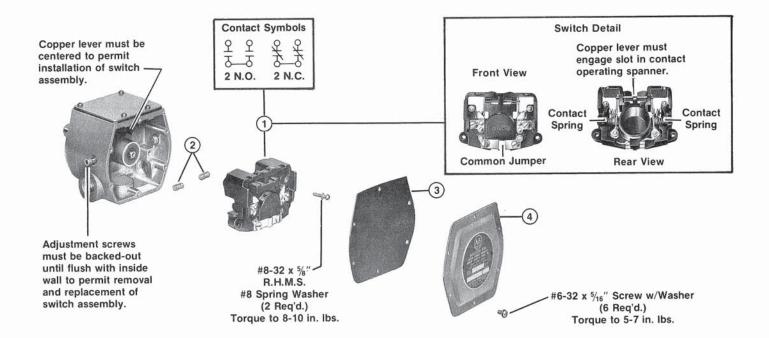

NOTE — The contacts are fed electrically thru a common terminal jumper. (See switch assembly detail, front view illustration.) If isolated contacts are desired - remove jumper and wire to each terminal.

ORDERING INFORMATION — Your order cannot be processed unless the following information is given: Part number, description of part, catalog number and series number or letter of switch.

		RENEWAL PARTS	3			
ltem No. Bulletin 808		1	2	3	4	
		Switch Assembly (Includes Contact Springs)	Contact Springs (2 Req'd)	Cover Gasket	Cover	
* Style	Series Identification Letter	Part No.	Part No.	Part No.	Part No.	
C-CL	A-B-C	X-332580	B-15118			
	D-E	X-332581	Not Available			
D-DL -	A-B-C	X-332582	B-15119 Not Available			
	D-E	X-332583				
E-EL -	A-B-C	X-332584			1	
	D-E	X-332585	Not Available			
	A-B-C	X-332586	B-15119			
F-FL -	D-E	X-332587	Not Available	F-16651	A-37863	
G-GL -	A-B-(Not Available X-332588		B-26679	Not Available Not		lvai
	D-E	X-332589	Not Available			
H-HL -	A-B-C	X-332584	B-15118			
	D-E	X-332585	Not Available			
J-JL	F	X-332589	B-22679 N	ot Available		
K-KL	F	X-332585	B-15118 N	ot Available	Э	l
M-ML	F	X-332583	B-15119 N	ot Available	9	
R-RL	F	X-332587	B-15119 No	ot Available		

NOTE — Parts indicated with are recommended spare parts.

Interchangeable Mounting Brackets



Base



3 Point Flange





4 Point Flange

MOUNTING BRACKETS Type of Mtg. Catalog No. 808-N1 Base 3 Point Flange 808-N2 4 Point Flange 808-N3 Base X-268875 (NEMA 7 & 9) Not Available

Installation instructions are included with brackets.

* Added since previous issue.

