
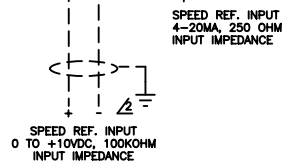
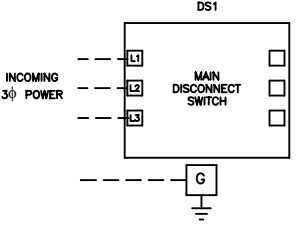


CUSTOMER TERMINALS

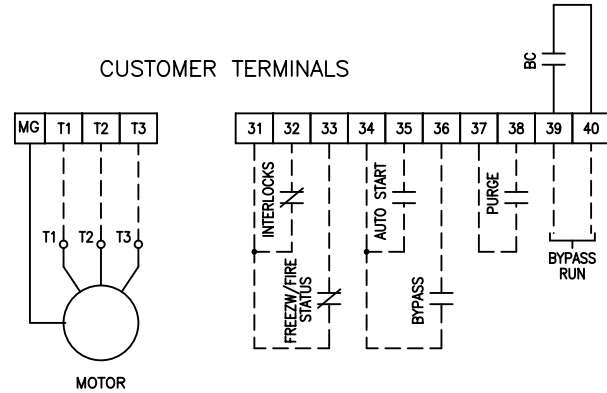

△ OPENING OF THE FREEZE/FIRE INTERLOCK WILL REQUIRE MANUAL RESET.  
 △ WIRE TO ANALOG INPUT #2 AND CHANGE PARAMETER WHEN IN "AUTO MODE" SPEED REFERENCE WILL COME FROM 0-10V SOURCE WIRED TO ANALOG INPUT #1. IF 4-20mA SOURCE IS TO BE USED, PO38 [SPEED REFERENCE] = 3 "ANALOG IN2".

-- CONNECTIONS SUPPLIED BY CUSTOMER

DATE	BY	APPROVAL
		DESIGN REVIEW
		FDR MANUFACTURING
		AS SHIPPED
		AS COMMISSIONED

REV.	DATE	BY	ECN/CR. NO.
A	11/24/04	JRF	
B	5/10/05	JRF	
C	11/1/07	AVR	
D	6/25/08	AVR	



THIS DRAWING IS THE PROPERTY OF ROCKWELL AUTOMATION, INC. OR ITS SUBSIDIARIES AND MAY NOT BE COPIED, USED OR DISCLOSED FOR ANY PURPOSE EXCEPT AS AUTHORIZED IN WRITING BY ROCKWELL AUTOMATION, INC.

TITLE  
 INTER-CONNECT DRAWING - PF400, STYLE B W/LINE REACTOR  
 3-50HP @ 208VAC & 3-100HP @ 460VAC

DR. BY JRF/ACI DATE 5/17/04	CHK. BY JFH/ACI DATE 5/17/04	ENG. DATE	DWG. NO. 97D00755 -	NEXT SH. 1	SH. NO. 1
--------------------------------	---------------------------------	-----------	---------------------	------------	-----------