




Fused Field Wire Conversion Module for A-B 1771-OBD to two 1756-OC8 (Cat 1492-CM1771-LD008F)

Local language (French, Italian, German & Spanish) versions of this document can be downloaded by going to www.ab.com. In the left margin click on Publications Library and Literature Library. In the Search Area (right margin), Search by Catalog Number and in the Search box type in the catalog number of the conversion system component.

I. Module Description

The 1492-CM1771-LD008F, fused conversion module provides field wire signal conversion from an A-B 1771-OBD, 10 to 60Vdc, 16 point output module to two (2) 1756-OC8, 30 to 60Vdc^①, 8 point output modules. The conversion module provides the mating connector to the 1771-OBD module swing-arm/terminal block with the attached field wires. It routes those signals via its 37-pin connector and a single 1492-CONCAB[®]S1 pre-wired cable to compatible terminals on the two (2) 1756-OC8 modules. To maintain the functionality of the 1771-OBD module the conversion module provides 1 mechanical fuse; 1 for each DC+ (refer to the Wiring Diagram on page 2 for details). NOTICE: The two 1756-OC8 modules must be located directly adjacent to each other in the 1756 chassis, due to the orientation of the 1756 terminals on the 1492-CONCAB[®]S1 pre-wired cable.

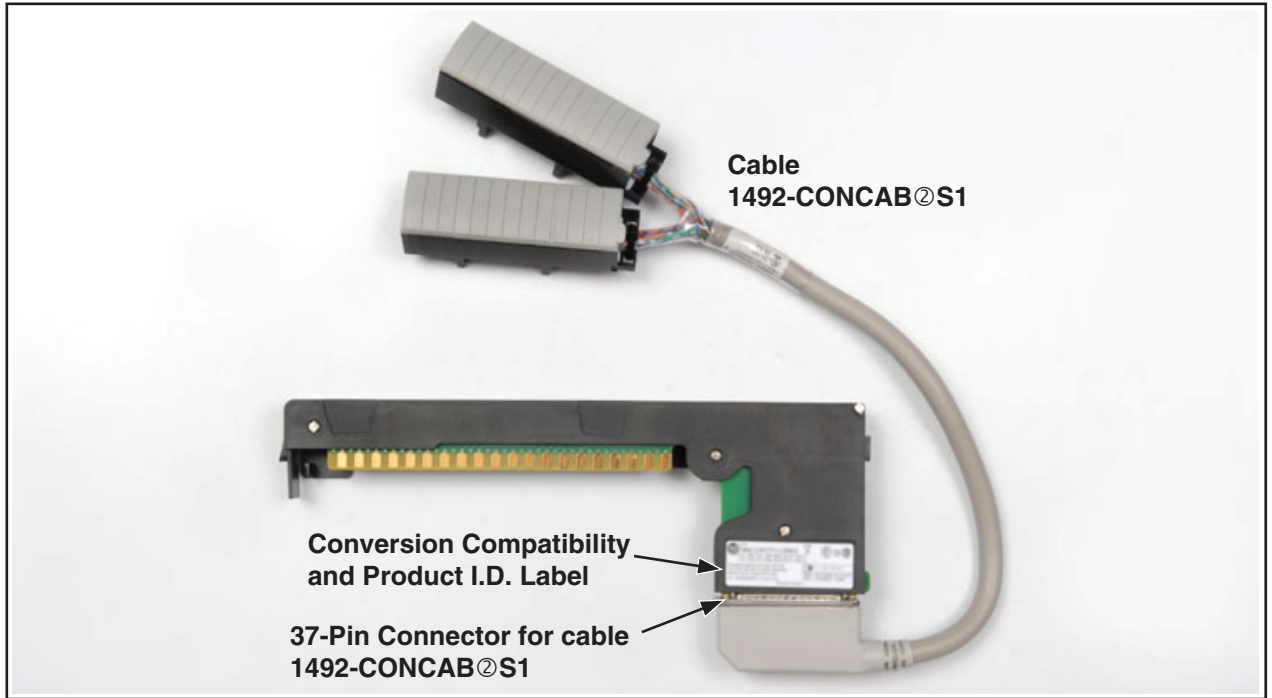

1492-CM1771-LD008F Conversion Module



WARNING

De-energize and lockout any and all power to all I/O field devices connected to the A-B 1771 I/O chassis, and the power to the 1771 I/O chassis itself. Ensure all power is de-energized and locked out to any device in the control cabinet where the conversion is to be performed. Ensure work is performed by qualified personnel.

II. Module Installation

The 1492-CM1771-LD008F conversion module must be installed in a 1492 conversion base-plate and cover-plate assembly. The installation of the module into the assembly is explained in the Installation Manual that ships with the conversion assembly. For a list of compatible assemblies refer to Appendix A

III. Conversion Module Compatibility Matrix

Conversion Module	Compatible 1771 Output Module	Compatible 1756 Output Module	Required 1492 Cable
1492-CM1771-LD008F	1771-OBD	Two 1756-OC8	1492-CONCAB [®] S1

^① This is cable length in meters. Available lengths are limited to 005 (0.5m) and 010 (1.0m)

IV. Conversion Module Wiring Diagram


The following diagram shows the connections from the existing 1771-OBD swing-arm, through the conversion module, 1492 cable and to the two 1756-OC8 output modules. The diagram can be used as an aid in possible system troubleshooting.



WARNING

There are several key application considerations and system specifications (bottom of drawing) when using these components (conversion module, cable and output module). Read and understand these considerations before installation. In addition, refer to the current draw requirements of the existing loads for this configuration to ensure they are within the current ratings of the 1756 output module.

Conversion: 1771-OBD to 1756-OC8 Qty. 2 with 1492-CM1771-LD008F

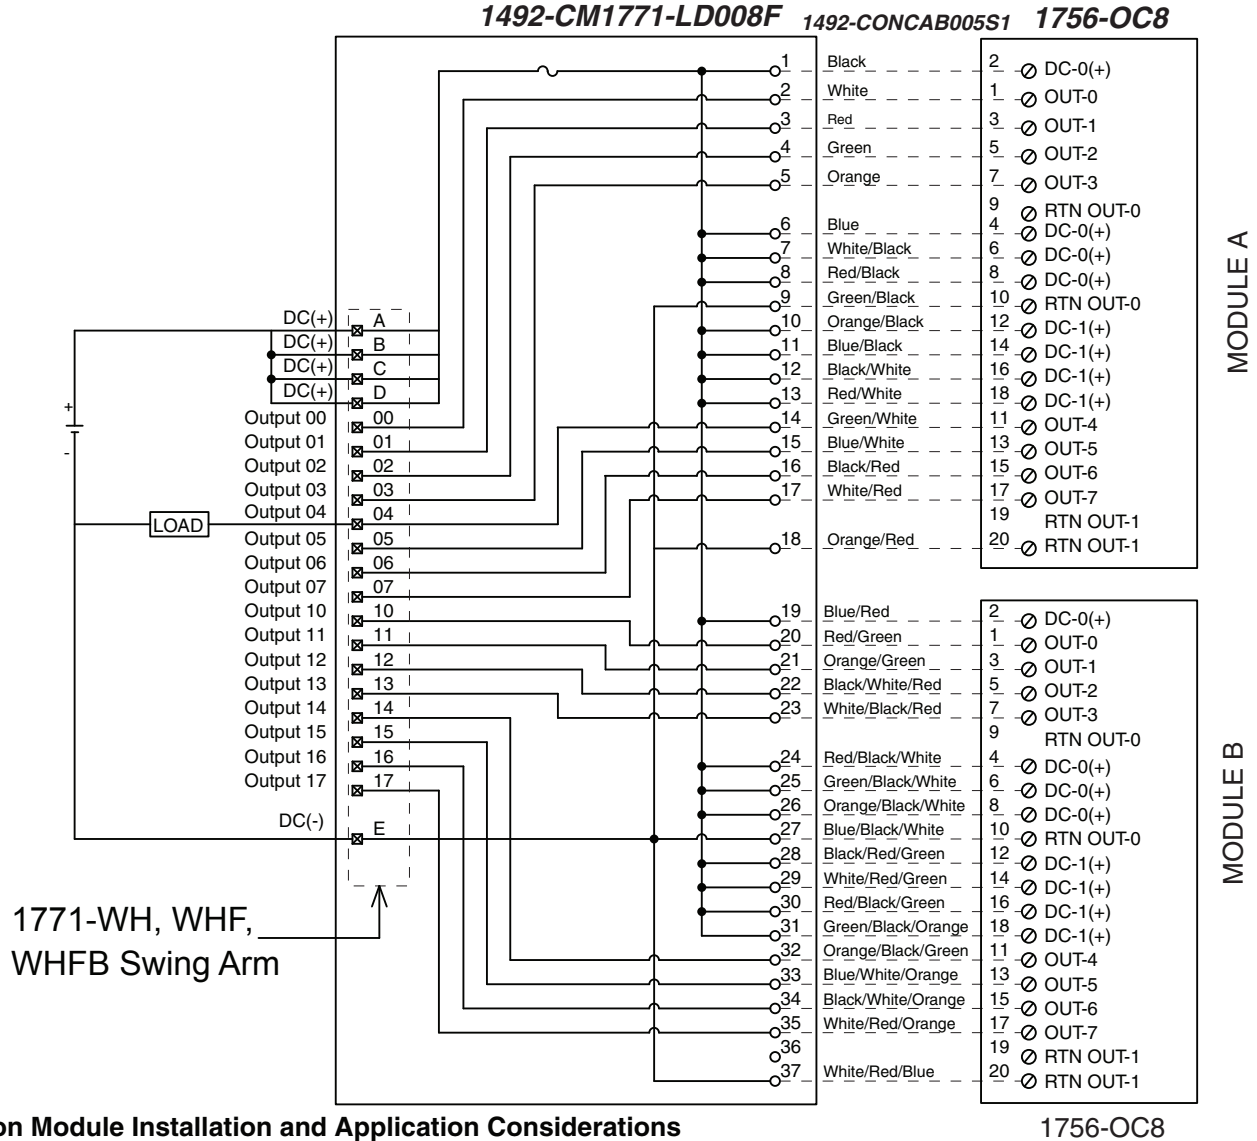

Conversion Module Installation and Application Considerations

① The 1771-OBD module output current limits versus 1756-OC8 limits are as follows:

	1771-OBD	1756-OC8 w/1492-CONCAB005S1
a) Current/Point	2A	2A
b) Current /Module	8A	8A
c) Surge Current /Point	4A for 10ms	4A for 10ms

② The 1771-OBD has a single 10A, 250V rectifier fuse (1/4 x 1 1/4 inch). The 1756-OC8 is NOT fused, as such a 2AG fuse clip and 10A fuse is provided on the 1492-CM1771-LD008F conversion module.

③ The 1492-CONCAB005S1 is limited to 3A per pin.

④ The 1771-OBD is rated 10V to 60V DC. The 1756-OC8 is rated 30V to 60V DC. If the load source voltages is less than 30V DC, then use 1756-OB16E with the 1492-CM1771-LD006 conversion module.

⑤ This configuration uses two(2) 1756-OC8 output modules to replace a single 1771-OBD output module. This may require the use of a larger 1756 I/O chassis and conversion mounting assembly. Ensure there is sufficient panel space to allow for this possibility.

⑥ Refer to your 1771-OBD and 1756-OC8 Installation Manual wiring schematics and diagrams for more details. Ensure 1756 output module ratings are not exceeded.

[Reference Doc: 41170-937 (Version 00)]

V. Fuse Installation and Replacement

The 1492-CM1771-LD008F conversion module has one mechanical fuse holder with the fuse located on the circuit board inside the modules plastic case. The following explains how to replace the fuse:

- 1) Remove the 4 screws that hold both halves of the conversion module case together (refer to the following Figure A).

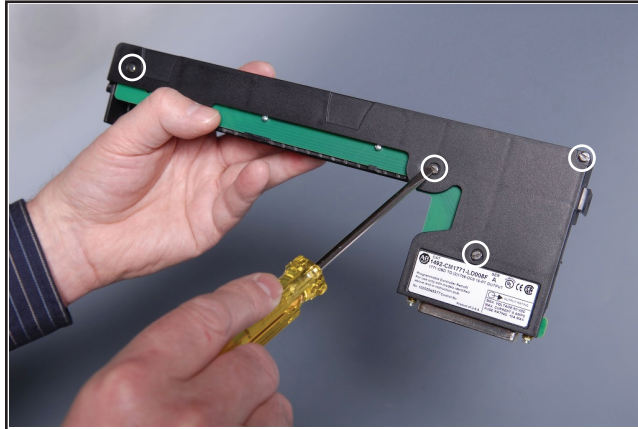


Figure A

- 2) Disassemble both case halves so you can access the module's circuit board. Remove and replace the fuse (refer to the below Figure B).

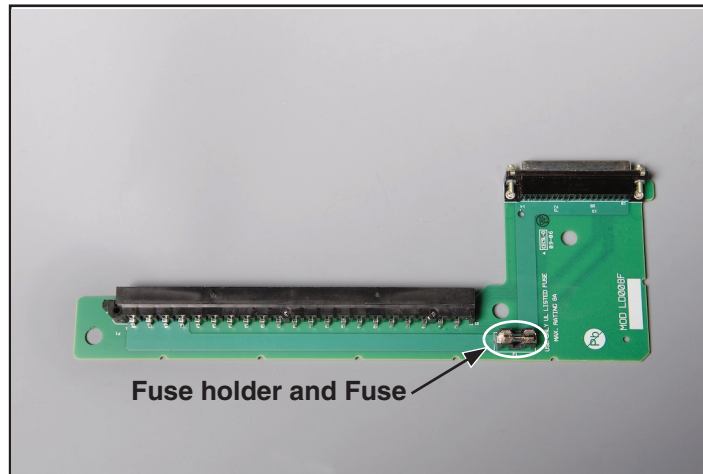


Figure B

- 3) Reassemble the two case halves to the circuit board and replace the four screws that hold the case together (Do NOT over torque the screws (Maximum torque is 5.0 in-lbs.)

NOTES:

- 1) For module operation a fuse must be inserted into the fuse holder
- 2) Physical Fuse Size: 2AG
- 3) Possible Fuse Supplier: Littelfuse (Part Number: 225010P)
- 4) Maximum Fuse Current rating based on Conversion System Components: 10.0 Amps

V. 1492-CM1771-LD008F Conversion Module Specifications

(Operating specifications are when installed in the Conversion System base / cover-plate assembly)

Specification	Value
Dimensions	11.81 in. (height) x 4.38 in. (depth) x 1.5 in. (width) 300 mm. (height) x 111.25 mm (depth) x 38.1 mm (width)
Approximate Shipping Weight	265.4 g (0.58 lbs) (includes carton)
Storage Temperature	-40 to +85°C (-40 to +185°F)
Operating Temperature	0 to 60°C (32 to 140°F)
Operating Humidity	5 to 95% at 60°C (non-condensing)
Shock	
Nonoperating	50g
Operating	30g
Operating Vibration	2g at 10 to 500Hz (Agrees with 1756 I/O module specifications)
Maximum Operating Voltage	60 Vdc
Max. Module Operating Current	
Per Point:	2 Amps
Per Module:	8 Amps
	NOTICE Refer to the Wiring Diagram(s) for current limits for a specific configuration.
Fusing	One, 10 Amps (maximum current based on conversion components)
Agency Certifications	UL Classified: Under UL File Number E113724 CSA CE: compliant for all applicable directives
Pollution Degree	2
Environmental Rating	IP20

VII. Appendix A - 1771 chassis to 1756 Chassis Conversion System Selection Process

- 1) Determine the number of 1771 I/O modules used in the 1771 I/O Chassis to be converted to 1756. NOTE: In some cases two 1756 modules may be required for one 1771 module. Select the applicable 1492 conversion modules from the Digital and Analog Conversion Selection Table Matrix.
- 2) Review the Max Slots for I/O and Chassis Width data from the below table, and select a 1756 I/O Chassis which meets your conversion needs from Step 1. Ensure the information from the I/O Conversion module tables are reviewed first.
- 3) Once the 1756 Chassis is selected, select the Conversion Assembly. The Conversion Assembly has the same dimensional foot-print as the 1771 chassis and can use the same mounting hardware. The assembly consists of a base-plate to hold the conversion modules and a cover-plate to protect the modules and to mount the selected 1756 chassis. The combined depth of the conversion assembly with the 1756 chassis mounted is 10.25 inches (Controller w/key) to 10.0 inches (Controller w/o Key).

Chassis Parameter ⁽¹⁾	1771 Chassis		1756 Equivalent Chassis		1771 Chassis		1756 Equivalent Chassis		1771 Chassis	1756 Equivalent Chassis	1771 Chassis	1756 Equivalent Chassis
	-A1B w/o PS	-A1B w/PS	-A4 ⁽³⁾	-A7	-A2B w/o PS	-A2B w/PS	-A7 ⁽⁴⁾	-A10	-A3B1	-A13 ⁽⁵⁾	-A4B	-A17 ⁽⁶⁾
Max Slots for I/O	4	4	3	6	8	8	6	9	12	12	16	16
Chassis Width ⁽²⁾	9.01	12.61	10.35	14.49	14.01	17.61	14.49	19.02	19.01	23.15	24.01	29.06
Conversion Assembly	1492-MUA1B-A4-A7				1492-MUA2B-A7-A10				1492-MUA3-A10-A13		1492-MUA4-A13-A17	

Foot Notes:

- ① 1771-A3B is not listed as it is used for 19 inch wide instrumentation panels
- ② Two 1771 width dimensions are provided as some PLC-5 processors have integrated power supplies. Dimension w/PS includes -P1, -P2, etc. Notice that the width dimension of some 1756 chassis exceed the width of the 1771 chassis with or without the power supply. Cover-plate chassis mounting design allows the excess 1756 chassis width to be evenly distributed to both sides, or excess to right or left. Carefully consider this in the conversion
- ③ 1756-A4 may work in a 1771-A1B application if 4 or less I/O slots were used. Conversion cover-plate is capable to mount -A4 or -A7
- ④ 1756-A7 may work in a 1771-A2B application if 6 or less I/O slots were used. Conversion cover-plate is capable to mount -A7 or -A10
- ⑤ 1756-A10 may work in a 1771-A3B1 application if 10 or less I/O slots were used. Conversion cover-plate is capable to mount -A10 or -A13
- ⑥ 1756-A13 may work in a 1771-A4B application if 13 or less I/O slots were used. Conversion cover-plate is capable to mount -A13 or -A17

